

LA 
WAVE
Operating Instructions
使用说明书



Clinical Centrifuge
台式低速离心机
LC-0100N

Safety Instructions



For your protection


- **Read the operating instructions in full before starting up and follow the safety instructions when in use.**
- Ensure that only trained staff work with the centrifuge.
- Do not operate the device in any manner not described in this user manual. When in doubt or have any trouble, ask for help.
- It's important to be alert for unexpected incidents. Be careful when operating this centrifuge.
- This centrifuge is not explosion-proof. Never use explosive or flammable samples.
- Do not install the centrifuge in or near places where inflammable gases are generated or chemicals are stored.
- Do not place dangerous materials 30cm around the centrifuge.
- Prepare all necessary safety measures before using samples that are toxic, radioactive or contaminated with pathogenic micro-organisms. Use of these is at your own responsibility.
- If the centrifuge, rotor and accessories have been contaminated by solutions with toxic, radioactive or pathogenic materials, clean them per the decontamination procedure specified.
- To avoid electrical shocks, insure hands are dry before handling the power cord when turn on/off the power switch.
- For safety, do not be within 30cm around the centrifuge when it's in operation.
- When the rotor is rotating, never release the door lock.
- Unauthorized repairs, disassembly or modifying the centrifuge are strictly prohibited.
- The centrifuge must be placed on a firm and flat table.
- Make sure the centrifuge is horizontal before running.
- Do not put your fingers or hands between the door and the cover when the door is open.

- Do not move or relocate the centrifuge when running.
- If fluid spills in the rotor chamber, please promptly clean and dry with a dry cloth to avoid sample contamination.
- Make sure to remove any objects and fragments of the tubes dropped inside the rotor chamber before running the centrifuge.
- Be cautious with rotor.
 - Always check corrosion and damages on the rotor surface before using it. Do not use the rotor if an abnormality is found.
 - Do not set the speed beyond the allowable minimum speed of the rotor kits (rotor or adapter). Make sure to run it below the allowable minimum speed.
 - Do not exceed the allowable imbalance.
 - Use the rotor and the tubes within their actual capacities.
 - If any abnormal condition occurs during operation, please stop it immediately and contact your service center.
 - Vibrations probably damage the centrifuge and contact your service center if any abnormal vibration.

Installation


- Unpack the device carefully and check for any damages which may have arisen during transit. Please contact the manufacturer /supplier for technical support.
- Place the centrifuge on a firm, flat and level platform and make sure it stand firmly.
- Ideal ambient temperature is $20^{\circ}\text{C} \pm 5^{\circ}\text{C}$. Do not place the centrifuge where the temperature exceeds 30°C .
- To avoid electrical shocks, ensure your hands are dry when touching the power cord.
- Keep clear of the centrifuge at least 10cm on both sides and at least 30cm behind it to guarantee the cooling efficiency.
- Make sure the centrifuge to be grounded properly.
- Keep away from heat or water to avoid sample temperature issues or centrifuge failures

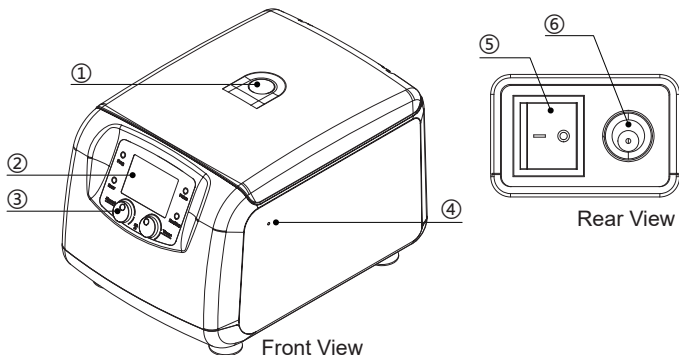


Structure




- ① View Window
- ② LED Display
- ③ Operation Panel
- ④ Door Release Hole
- ⑤ Power Switch
- ⑥ Power Inlet

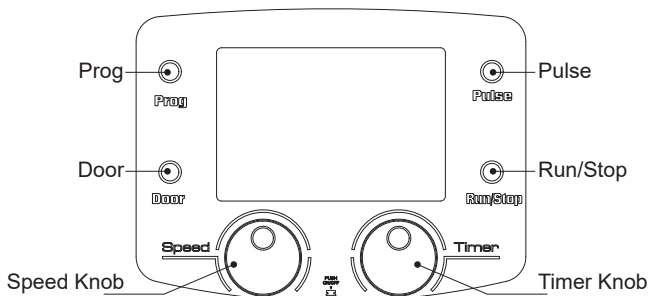Operation Panel




-  Open the door. It cannot work when the unit is running.
-  Run and stop the centrifuge
-  Quick spins. The centrifuge will keep running by pressing

the button and stop running by releasing the button. It only works when the unit stops and cannot work when the unit is running.

-  Select and save the programs. The centrifuge can store up to 10 programs. Select the saved programs by short press and save the new program (speed and time) by long press $\geq 2S$. It only works when the unit stops and cannot work when the unit is running.


Rotor Loading

- Load the supplied rotor onto the shaft and make sure the rotor is in position and connected well with the shaft.
- Fix the rotor with the supplied M4 Anti-skid Screw and then cover with the supplied silicone plug properly (refer to the below picture)
- Check the rotor is firmly tightened before running.
- Before lock the rotor, rotate it and observe carefully if there is obvious vibration, if so, please take off the rotor, turn some angle and install it again until the rotor rotates smoothly then lock it firmly.
- Close the door and make sure the door is closed completely.

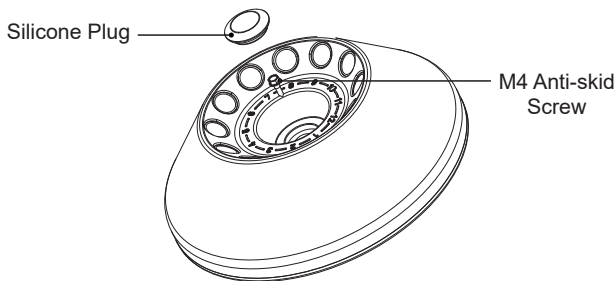

Cautions

- Keep the tubes loaded balanced. Although the centrifuge can accept sample balance by eye, we recommend that you keep this centrifuge in a well-balanced condition to extend its life span.
- Never run the centrifuge under an unbalanced condition even though the allowable imbalance is not exceeded.
- If any abnormality such as corrosion or scratches are found, stop using the rotor and contact your service center.
- Only manufacturer's rotors can be used with the rotor
- Symmetrically load centrifuge tubes into the rotor to keep the balance.

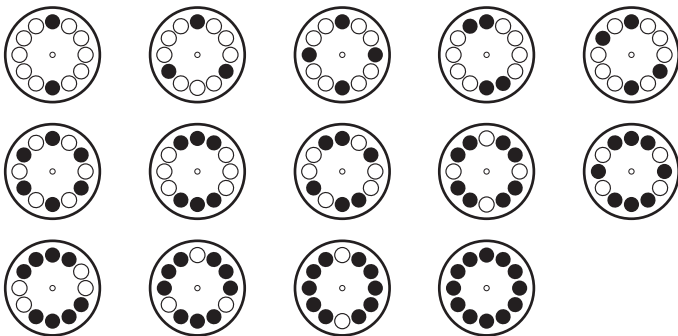

Operation

(1) Set the speed RPM/RCF

- Press the speed knob once and the RCF value will flash
- Rotate the speed knob to set the RCF value
- Press the speed knob once to confirm the RCF value
- Press the speed knob twice, RCF will change to RPM and the RPM value will flash. Rotate and press it to set and confirm the RPM.

- After set the speed without pressing the button for confirmation, the system will stop the value flash and confirm the set value after several seconds.

(2) Set the time

- Press the time knob once and the time value will flash
- The time can be set from 30 seconds – 99 minutes
- Rotate the time knob to set the time
- Press the time knob to confirm the time value
- After set the time without pressing the button for confirmation, the system will stop the value flash and confirm the set value after several seconds.

(3) Running

- Press button “Run/Stop” to start running.
- Timer will work as soon as the set speed is reached and the centrifuge displays the remaining run time.
- If an error occurs during the running, the centrifuge will stop automatically and display the error code. The error code can be checked in the Trouble Shooting and the corrective actions can be applied accordingly.

(4) Stop Running

- The centrifuge will stop when the set time is up or by pressing the button “Run/Stop”.
- When running stops, the centrifuge will beep and the door will open automatically.
- If the door is closed, to open it by pressing the button “door”.

Maintenance

- If the centrifuge is exposed to the ultraviolet rays for a long time, the color would probably be changed. It's better to cover the centrifuge from direct exposure.

- Clean the centrifuge with cloth or sponge moistened with a neutral detergent solution.
- Sterilize the centrifuge with cloth moistened with 70% ethanol solution.
- Drive shaft should be maintained regularly and can be wiped with soft cloth and then applied a thin coat of silicon grease.
- Do not directly pour water, neutral detergent or disinfectant solution into the rotor chamber, otherwise the liquid would leak into the drive unit and cause corrosion or deterioration to the bearings.
- To prevent corrosion, remove the rotor from the rotor chamber.
- If sample links into the rotor, rinse the rotor with water. Apply a thin coat of silicon grease to the rotor when it's completely dry.
- Check the rotor every 3 months to make sure the tube and the rotor holes are clean.

Trouble Shooting

The centrifuge has a self-diagnostic function. If a problem occurs, an error/warning code will be displayed on the screen and the operator can determine the malfunction with the warning code below

Cause and Symptom	Proposed Solutions	Remark
Error1 Abnormal running without rotor	Load the rotor and restart the machine	
Error 2 Hall cable failure	Check if the Hall cable connector is loose.	
Error 3 Over heating inside the motor	Power off to cool the machine and re-start at lower speed.	
Error 4 Motor over speed	Check circuit board/ motor	
Error 5 Abnormal vibration	Load the rotor again Load the tubes Symmetrically Tighten the rotor lid firmly	
Error 6 Door motor stalling	Check door motor	

Cause and Symptom	Proposed Solutions	Remark
Error 7 Abnormal Hall of door motor	Check Hall structure of door motor	
Error 8	/	
Error 9 External EEPROM failure	Replace mainboard	
Error 10 Other faults	Other faults	Other faults except E1~E9

Open the door

(1) If powered on

- The door will open automatically after the running completed.
- Open the door by pressing the button “Door”

(2) If power outage

- The door cannot open automatically if there's a power outage. It can be opened manually.
- Make sure the running stops completely
- Insert a screw driver into the hole on the top left side of the unit and push forward to open the door.

Accessory

- 24* rotor adapters
- 1 * hex socket screwdriver
- 1 * door open driver
- 1 * power adapter

Specifications

Items	LC-0100N
Maximum Speed (rpm)	4500rpm (300-4500rpm),increment:100rpm
Maximum RCF (g)	2200 xg
Speed Accuracy	±45rpm

Rotor Capacity	10ml/7ml/5ml×12 ; 15mLx6
Time Range	30sec-99min-HOLD (Continuous Operation)
Driving motor	Brushless DC motor
Safety devices	Door interlock; Over-speed detector; Over-temperature detector; Automatic Internal Diagnosis
Power	Single-phase, AC 100V-240V, 50Hz/60Hz 2.5A
Acceleration/ Braking time [Sec]	20s↑15s↓
Additional features	Speed/RCF switch Short-time run function; sound-alert function

Warranty

The instrument is warranted to be free from defects in materials and workmanship under normal use and service for a period of 12 months from the date of invoice. The warranty is extended only to the original purchaser.

It doesn't cover the below cases,

- Failures caused by incorrect installation
- Failures caused by rough or improper handling
- Failures caused by conveyance or relocation after installation
- Failures caused by unauthorized disassembly or modification
- Failures caused by using non-standard spare parts or accessories and unauthorized modification of the rotor or centrifuge
- Failures caused by natural disasters including fire, earthquake and so on.
- Consumables and parts have a limited guarantee period

LAB
WAVE

Date: 2024.03.11

Version: V1.0